## 3A Peak, 18V, 500kHz, ACOT<sup>™</sup> Step-Down Converter

### **General Description**

The RT6213A/B is a high-efficiency, monolithic synchronous step-down DC/DC converter that can deliver up to 3A peak output current from a 4.5V to 18V input supply. The RT6213A/B adopts ACOT architecture to allow the transient response to be keep in constant improved and frequency. Cycle-by-cycle current limit provides protection against shorted outputs and soft-start eliminates input current surge during start-up. Fault conditions also include output under voltage protection, output over current protection, and thermal shutdown.

## **Ordering Information**

RT6213A/B PC Package Type J6F : TSOT-23-6 (FC) Lead Plating System G : Green (Halogen Free and Pb Free) UVP Option H : Hiccup PSM/PWM A : PSM Mode B : PWM Mode

#### Note :

Richtek products are :

- ► RoHS compliant and compatible with the current requirements of IPC/JEDEC J-STD-020.
- ► Suitable for use in SnPb or Pb-free soldering processes.

### Features

- Integrated 150mΩ/70mΩ MOSFETs
- 4.5V to 18V Supply Voltage Range
- 500kHz Switching Frequency
- ACOT Control
- 0.8V ± 1.5% Voltage Reference
- Internal Start-Up into Pre-biased Outputs
- Compact Package: TSOT-23-6 pin
- Input Under-Voltage Lockout
- Over-Current Protection and Hiccup

### Applications

- Set-Top Boxes
- Portable TVs
- Access Point Routers
- DSL Modems
- LCD TVs

## **Marking Information**

RT6213AHGJ6F

09=DNN

09= : Product Code DNN : Date Code


08= : Product Code

DNN : Date Code

RT6213BHGJ6F

08=DNN

### **Simplified Application Circuit**

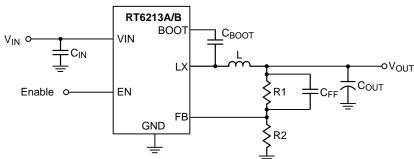


1



### **Pin Configurations**

(TOP VIEW)




TSOT-23-6 (FC)

### **Functional Pin Description**

Pin No.	Pin Name	Pin Function
1	GND	System Ground. Provides the ground return path for the control circuitry and low-side power MOSFET.
2	LX	Switch Node. LX is the switching node that supplies power to the output and connect the output LC filter from LX to the output load.
3	VIN	Power Input. Supplies the power switches of the device.
4	FB	Feedback Voltage Input. This pin is used to set the desired output voltage via an external resistive divider. The feedback voltage is 0.8V typically.
5	EN	Enable Control Input. Floating this pin or connecting this pin to GND can disable the device and connecting this pin to logic high can enable the device.
6	BOOT	Bootstrap Supply for High-Side Gate Driver. Connect a 100nF or greater capacitor from LX to BOOT to power the high-side switch.

## **Function Block Diagram**

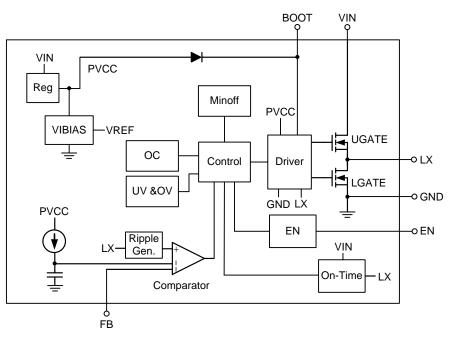

 Copyright © 2015 Richtek Technology Corporation. All rights reserved.
 RICHTEK is a registered trademark of Richtek Technology Corporation.

 www.richtek.com
 DS6213A/B-01
 June
 2015

### Operation

The RT6213A/B is a synchronous step-down converter with advanced constant on-time control mode. Using the ACOT<sup>TM</sup> control mode can reduce the output capacitance and provide fast transient response. It can minimize the component size without additional external compensation network.

### **Current Protection**

The inductor current is monitored via the internal switches cycle-by-cycle. Once the output voltage drops under UV threshold, the RT6213A/B will enter hiccup mode.

### **UVLO Protection**

To protect the chip from operating at insufficient supply voltage, the UVLO is needed. When the input voltage of VIN is lower than the UVLO falling threshold voltage, the device will be lockout.

### Thermal Shutdown

When the junction temperature exceeds the OTP threshold value, the IC will shut down the switching operation. Once the junction temperature cools down and is lower than the OTP lower threshold, the converter will autocratically resume switching.



### Absolute Maximum Ratings (Note 1)

Supply Input Voltage	-0.3V to 20V
Switch Node Voltage, LX	–0.3V to (V <sub>IN</sub> + 0.3V)
BOOT Pin Voltage	$(V_{\text{LX}}-0.3\text{V})$ to $(V_{\text{IN}}$ + 6.3V)
Other Pins	–0.3V to 6V
• Power Dissipation, $P_D @ T_A = 25^{\circ}C$	
TSOT-23-6 (FC)	1.667W
Package Thermal Resistance (Note 2)	
TSOT-23-6 (FC), θJA	60°C/W
TSOT-23-6 (FC), θJC	8°C/W
Lead Temperature (Soldering, 10 sec.)	260°C
Junction Temperature	150°C
Storage Temperature Range	–65°C to 150°C
• ESD Susceptibility (Note 3)	
HBM (Human Body Model)	2kV

## Recommended Operating Conditions (Note 4)

Supply Input Voltage	4.5V to 18V
Ambient Temperature Range	$-40^{\circ}C$ to $85^{\circ}C$
Junction Temperature Range	–40°C to 125°C

### **Electrical Characteristics**

(V<sub>IN</sub> = 12V,  $T_A$  = 25°C, unless otherwise specified)

Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit
Supply Voltage						
VIN Supply Input Operating Voltage	VIN		4.5		18	v
Under-Voltage Lockout Threshold	Vuvlo		3.6	3.9	4.2	V
Under-Voltage Lockout Threshold Hysteresis	ΔVuvlo			340		mV
Shutdown Current	I <sub>SHDN</sub>	$V_{EN} = 0V$			5	μΑ
Quiescent Current	lq	$V_{EN} = 2V, V_{FB} = 0.85V$		0.5		mA
Soft-Start						
Soft-Start Time				1000		μS
Enable Voltage						
Enable Voltage Threshold		V <sub>EN</sub> Rising	1.4	1.5	1.6	V
Enable Voltage Threshold		V <sub>EN</sub> Falling	1.18	1.28	1.38	V

## RT6213A/B

Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit
Feedback Voltage						
Feedback Voltage Threshold	V <sub>FB_TH</sub>	$4.5V \le V_{IN} \le 18V$	0.788	0.8	0.812	V
Internal MOSFET						
High-Side On-Resistance	RDS(ON)_H	$V_{BOOT} - V_{LX} = 4.8V$		150		mΩ
Low-Side On-Resistance	RDS(ON)_L			70		11122
Current Limit						
High-Side Switch Current Limit	I <sub>LIM_H</sub>			5.8		
Low-Side Switch Valley Current Limit	ILIM_L		3.1	3.8		A
Switching Frequency						
Switching Frequency	fosc		400	500		kHz
On-Time Timer Control						
Maximum Duty Cycle	D <sub>MAX</sub>			86		%
Minimum On Time	ton(MIN)			60		nS
Minimum Off Time	toff(MIN)			240		115
Output Under Voltage and Ove	er Voltage Pr	otections				
OVP Trip Threshold		OVP Detect		125		%
OVP Propagation Delay				10		μS
UVP Trip Threshold		UVP Detect	45	50	55	%
UVP Thp Threshold		Hysteresis		10		/0
UVP Propagation Delay				5		μS
Thermal Shutdown						
Thermal Shutdown Threshold	T <sub>SD</sub>			150		°C
Thermal Shutdown Hysteresis	$\Delta T_{SD}$			20		0


**Note 1.** Stresses beyond those listed "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions may affect device reliability.

Note 2.  $\theta_{JA}$  is measured at  $T_A = 25^{\circ}$ C on a high effective thermal conductivity four-layer test board per JEDEC 51-7. The first layer of copper area is filled  $\theta_{JC}$  is measured at the exposed pad of the package.

Note 3. Devices are ESD sensitive. Handling precaution recommended.

Note 4. The device is not guaranteed to function outside its operating conditions.

## **Typical Application Circuit**

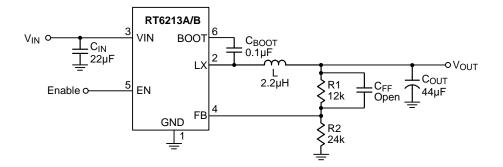


V <sub>OUT</sub> (V)	<b>R1 (k</b> Ω)	<b>R2 (k</b> Ω)	C <sub>FF</sub> (pF)	<b>L (</b> μ <b>H)</b>	<b>C</b> ουτ (μ <b>F</b> )
5.0	126	24	10 to 22	4.7	22*2
3.3	75	24	10 to 22	3.6	22*2
2.5	51	24	10 to 22	3.6	22*2
1.8	30	24	10 to 22	2.2	22*2
1.5	21	24		2.2	22*2
1.2	12	24		2.2	22*2
1.0	6	24		2.2	22*2

Table 1. Recommended Components Selection


 Copyright © 2015 Richtek Technology Corporation. All rights reserved.
 RICHTEK is a registered trademark of Richtek Technology Corporation.


 www.richtek.com
 DS6213A/B-01
 June
 2015

## **Typical Operating Characteristics**

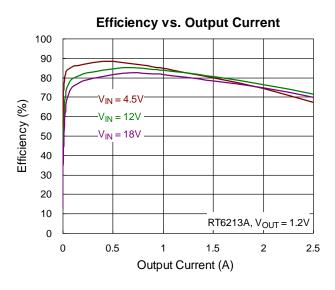



#### Efficiency vs. Output Current 100 90 80 $V_{OUT} = 5V$ 70 Efficiency (%) V<sub>OUT</sub> = 3.3V 60 V<sub>OUT</sub> = 1.2V 50 40 30 20 10 0 0 0.5 1 1.5 2 2.5 Output Current (A)

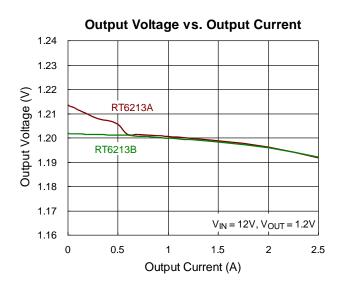

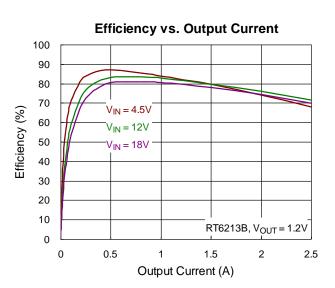


Efficiency vs. Output Current

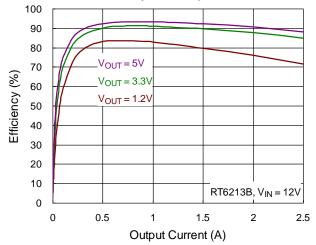


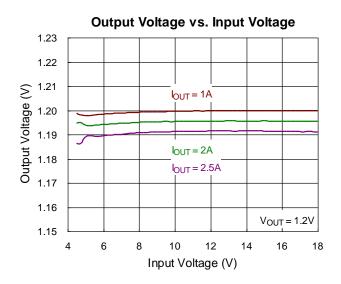



Copyright © 2015 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation. DS6213A/B-01 June 2015 www.richtek.com

Switching Frequency vs. Output Current 700 600 Switching Frequency (kHz) RT6213B 500 400 RT6213A 300 200 100 0 0 0.5 1 1.5 2 2.5 Output Current (A)

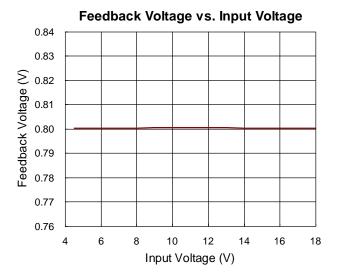


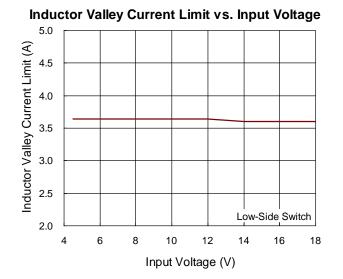

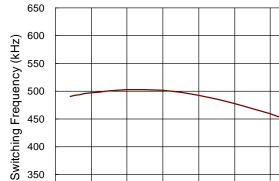


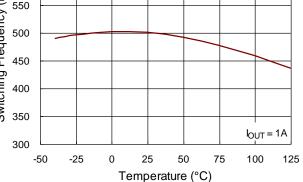

Feedback Voltage vs. Temperature

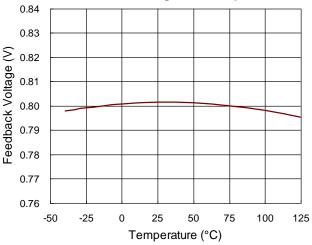



Inductor Valley Current Limit vs. Temperature

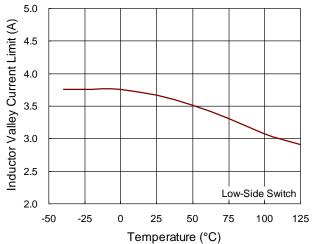


Switching Frequency vs. Temperature

RICHTEK

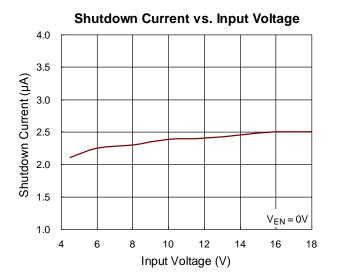


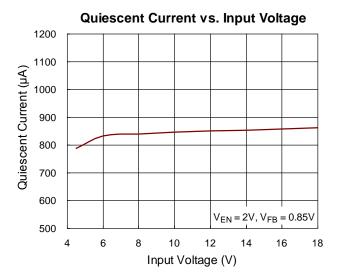

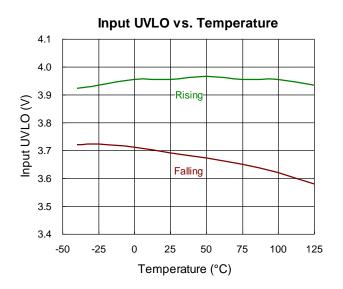



#### Shutdown Current vs. Temperature

**RT6213A/B** 

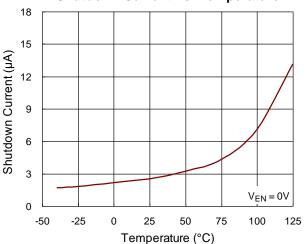



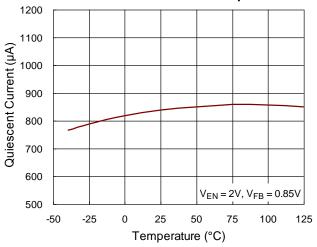

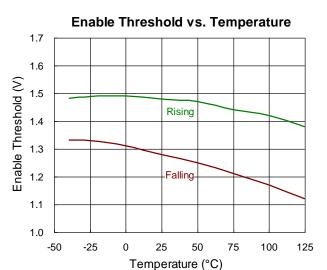


www.richtek.com

9






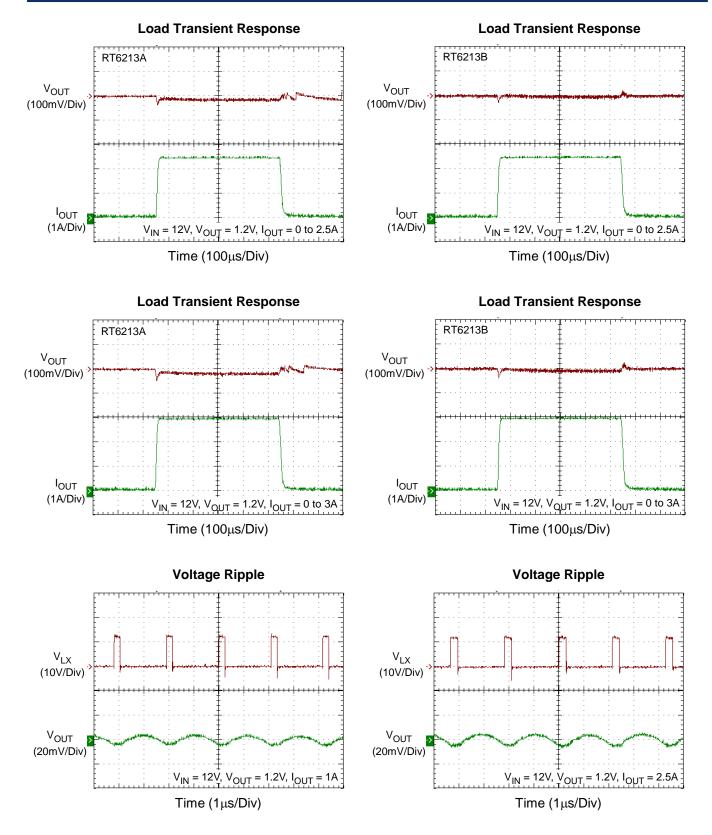


 Copyright © 2015 Richtek Technology Corporation. All rights reserved.
 RICHTEK is a registered trademark of Richtek Technology Corporation.


 www.richtek.com
 DS6213A/B-01
 June
 2015

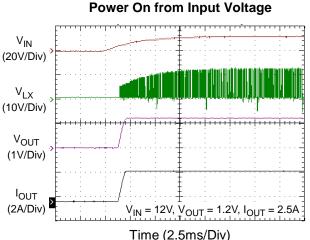

Time (2.5ms/Div)

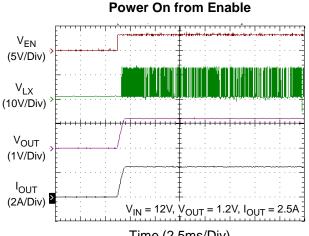


Time (2.5ms/Div)

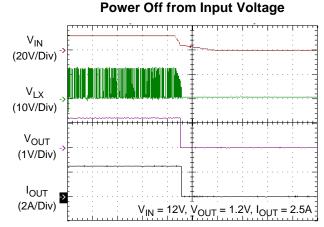

Time (25ms/Div)

**RT6213A/B** 

Power Off from Enable

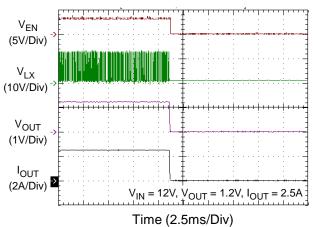

Copyright © 2015 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.

### **Application Information**

#### **Inductor Selection**

Selecting an inductor involves specifying its inductance and also its required peak current. The exact inductor value is generally flexible and is ultimately chosen to obtain the best mix of cost, physical size, and circuit efficiency. Lower inductor values benefit from reduced size and cost and they can improve the circuit's transient response, but they increase the inductor ripple current and output voltage ripple and reduce the efficiency due to the resulting higher peak currents. Conversely, higher inductor values increase efficiency, but the inductor will either be physically larger or have higher resistance since more turns of wire are required and transient response will be slower since more time is required to change current (up or down) in the inductor. A good compromise between size, efficiency, and transient response is to use a ripple current ( $\Delta I_L$ ) about 20% to 50% of the desired full output load current. Calculate the approximate inductor value by selecting the input and output voltages, the switching frequency (f<sub>SW</sub>), the maximum output current  $(I_{OUT(MAX)})$  and estimating a  $\Delta I_L$  as some percentage of that current.

$$L = \frac{V_{OUT} \times (V_{IN} - V_{OUT})}{V_{IN} \times f_{SW} \times \Delta I_L}$$

Once an inductor value is chosen, the ripple current  $(\Delta I_L)$  is calculated to determine the required peak inductor current.

$$\Delta I_L = \frac{V_{OUT} \times (V_{IN} - V_{OUT})}{V_{IN} \times f_{SW} \times L} \text{ and } I_L(\text{PEAK}) = I_{OUT}(\text{MAX}) + \frac{\Delta I_L}{2}$$

To guarantee the required output current, the inductor needs a saturation current rating and a thermal rating that exceeds I<sub>L(PEAK)</sub>. These are minimum requirements. To maintain control of inductor current in overload and short circuit conditions, some applications may desire current ratings up to the current limit value. However, the IC's output under-voltage shutdown feature make this unnecessary for most applications.

IL(PEAK) should not exceed the minimum value of IC's upper current limit level or the IC may not be able to meet the desired output current. If needed, reduce the inductor ripple current ( $\Delta I_L$ ) to increase the average inductor current (and the output current) while ensuring that IL(PEAK) does not exceed the upper current limit level.

RICHTEK

For best efficiency, choose an inductor with a low DC resistance that meets the cost and size requirements. For low inductor core losses some type of ferrite core is usually best and a shielded core type, although possibly larger or more expensive, will probably give fewer EMI and other noise problems.

Considering the Typical Operating Circuit for 1.2V output at 2.5A and an input voltage of 12V, using an inductor ripple of 0.5A (20%), the calculated inductance value is :

$$L = \frac{1.2 \times (12 - 1.2)}{12 \times 500 k Hz \times 0.5A} = 4.3 \mu H$$

The ripple current was selected at 0.5A and, as long as we use the calculated 4.3µH inductance, that should be the actual ripple current amount. The ripple current and required peak current as below :

$$\Delta I_{L} = \frac{1.2 \times (12 - 1.2)}{12 \times 500 \text{kHz} \times 4.3 \mu \text{H}} = 0.5 \text{A}$$

and 
$$I_{L(PEAK)} = 2.5A + \frac{0.5A}{2} = 2.75A$$

For the  $4.3\mu H$  value, the inductor's saturation and thermal rating should exceed at least 2.75A. For more conservative, the rating for inductor saturation current must be equal to or greater than switch current limit of the device rather than the inductor peak current.

#### **Input Capacitor Selection**

The input filter capacitors are needed to smooth out the switched current drawn from the input power source and to reduce voltage ripple on the input. The actual capacitance value is less important than the RMS current rating (and voltage rating, of course). The RMS input ripple current (IRMS) is a function of the input voltage, output voltage, and load current :

$$I_{RMS} = I_{OUT(MAX)} \times \frac{V_{OUT}}{V_{IN}} \sqrt{\frac{V_{IN}}{V_{OUT}} - 1}$$

## RT6213A/B

Ceramic capacitors are most often used because of their low cost, small size, high RMS current ratings, and robust surge current capabilities. However, take care when these capacitors are used at the input of circuits supplied by a wall adapter or other supply connected through long, thin wires. Current surges through the inductive wires can induce ringing at the RT6213A/B input which could potentially cause large, damaging voltage spikes at VIN. If this phenomenon is observed, some bulk input capacitance may be required. Ceramic capacitors (to meet the RMS current requirement) can be placed in parallel with other types such as tantalum, electrolytic, or polymer (to reduce ringing and overshoot).

Choose capacitors rated at higher temperatures than required. Several ceramic capacitors may be paralleled to meet the RMS current, size, and height requirements of the application. The typical operating circuit uses two  $10\mu$ F and one  $0.1\mu$ F low ESR ceramic capacitors on the input.

#### **Output Capacitor Selection**

The RT6213A/B are optimized for ceramic output capacitors and best performance will be obtained using them. The total output capacitance value is usually determined by the desired output voltage ripple level and transient response requirements for sag (undershoot on positive load steps) and soar (overshoot on negative load steps).

#### **Output Ripple**

Output ripple at the switching frequency is caused by the inductor current ripple and its effect on the output capacitor's ESR and stored charge. These two ripple components are called ESR ripple and capacitive ripple. Since ceramic capacitors have extremely low ESR and relatively little capacitance, both components are similar in amplitude and both should be considered if ripple is critical.

 $V_{RIPPLE} = V_{RIPPLE(ESR)} + V_{RIPPLE(C)}$  $V_{RIPPLE(ESR)} = \Delta I_L \times R_{ESR}$  $V_{RIPPLE(C)} = \frac{\Delta I_L}{8 \times C_{OUT} \times f_{SW}}$ 

For the Typical Operating Circuit for 1.2V output and an inductor ripple of 0.5A, with 2 x  $22\mu$ F output capacitance each with about  $5m\Omega$  ESR including PCB trace resistance, the output voltage ripple components are :

$$\begin{split} & \mathsf{V}_{\mathsf{RIPPLE}(\mathsf{ESR})} = 0.5A \times 5m\Omega = 2.5m\mathsf{V} \\ & \mathsf{V}_{\mathsf{RIPPLE}(\mathsf{C})} = \frac{0.5A}{8 \times 44\mu\mathsf{F} \times 500\mathsf{kHz}} = 2.84\mathsf{mV} \\ & \mathsf{V}_{\mathsf{RIPPLE}} = 2.5\mathsf{mV} + 2.84\mathsf{mV} = 5.34\mathsf{mV} \end{split}$$

#### **Output Transient Undershoot and Overshoot**

In addition to voltage ripple at the switching frequency, the output capacitor and its ESR also affect the voltage sag (undershoot) and soar (overshoot) when the load steps up and down abruptly. The ACOT transient response is very quick and output transients are usually small.

However, the combination of small ceramic output capacitors (with little capacitance), low output voltages (with little stored charge in the output capacitors), and low duty cycle applications (which require high inductance to get reasonable ripple currents with high input voltages) increases the size of voltage variations in response to very quick load changes. Typically, load changes occur slowly with respect to the IC's 650kHz switching frequency.

But some modern digital loads can exhibit nearly instantaneous load changes and the following section shows how to calculate the worst-case voltage swings in response to very fast load steps.

The output voltage transient undershoot and overshoot each have two components : the voltage steps caused by the output capacitor's ESR, and the voltage sag and soar due to the finite output capacitance and the inductor current slew rate. Use the following formulas to check if the ESR is low enough (typically not a problem with ceramic capacitors) and the output capacitance is large enough to prevent excessive sag and soar on very fast load step edges, with the chosen inductor value.

The amplitude of the ESR step up or down is a function of the load step and the ESR of the output capacitor :

#### $V_{\text{ESR}\_\text{STEP}} = \Delta I_{\text{OUT}} \text{ x } R_{\text{ESR}}$

The amplitude of the capacitive sag is a function of the load step, the output capacitor value, the inductor value, the input-to-output voltage differential, and the maximum duty cycle. The maximum duty cycle during a fast transient is a function of the on-time and the minimum off-time since the ACOT<sup>TM</sup> control scheme will ramp the current using on-times spaced apart with minimum off-times, which is as fast as allowed. Calculate the approximate on-time (neglecting parasites) and maximum duty cycle for a given input and output voltage as :

$$t_{ON} = \frac{V_{OUT}}{V_{IN} \times f_{SW}} \text{ and } D_{MAX} = \frac{t_{ON}}{t_{ON} + t_{OFF(MIN)}}$$

The actual on-time will be slightly longer as the IC compensates for voltage drops in the circuit, but we can neglect both of these since the on-time increase compensates for the voltage losses. Calculate the output voltage sag as :

$$V_{SAG} = \frac{L \times (\Delta I_{OUT})^2}{2 \times C_{OUT} \times (V_{IN(MIN)} \times D_{MAX} - V_{OUT})}$$

The amplitude of the capacitive soar is a function of the load step, the output capacitor value, the inductor value and the output voltage :

$$V_{\text{SOAR}} = \frac{L \times (\Delta I_{\text{OUT}})^2}{2 \times C_{\text{OUT}} \times V_{\text{OUT}}}$$

For the Typical Operating Circuit for 1.2V output, the circuit has an inductor  $4.3\mu$ H and 2 x  $22\mu$ F output capacitance with  $5m\Omega$  ESR each. The ESR step is 2.5A x  $2.5m\Omega = 6.25mV$  which is small, as expected. The output voltage sag and soar in response to full 0A-2.5A-0A instantaneous transients are :

$$t_{ON} = \frac{1.2V}{12V \times 500 \text{kHz}} = 200 \text{ns}$$
  
and  $D_{MAX} = \frac{200 \text{ns}}{200 \text{ns} + 240 \text{ns}} = 0.455$ 

where 240ns is the minimum off time.

Vsag =	$\frac{4.3\mu H \times (2.5A)^2}{2 \times 44\mu F \times (12V \times 0.455 - 1.2V)}$	= 72mV
Vsoar =	$\frac{4.3\mu H \times (2.5A)^2}{2 \times 44\mu F \times 1.2V} = 254.5mV$	

The sag is about 6% of the output voltage and the soar is a full 21.2% of the output voltage. The ESR step is negligible here but it does partially add to the soar, so keep that in mind whenever using higher-ESR output capacitors.

The soar is typically much worse than the sag in high input, low-output step-down converters because the high input voltage demands a large inductor value which stores lots of energy that is all transferred into the output if the load stops drawing current. Also, for a given inductor, the soar for a low output voltage is a greater voltage change and an even greater percentage of the output voltage.

Any sag is always short-lived, since the circuit quickly sources current to regain regulation in only a few switching cycles. With the RT6213B, any overshoot transient is typically also short-lived since the converter will sink current, reversing the inductor current sharply until the output reaches regulation again. The RT6213A discontinuous operation at light loads prevents sinking current so, for that IC, the output voltage will soar until load current or leakage brings the voltage down to normal.

Most applications never experience instantaneous full load steps and the RT6213A/B high switching frequency and fast transient response can easily control voltage regulation at all times. Also, since the sag and soar both are proportional to the square of the load change, if load steps were reduced to 1A (from the 3A examples preceding) the voltage changes would be reduced by a factor of almost ten. For these reasons sag and soar are seldom an issue except in very low-voltage CPU core or DDR memory supply applications, particularly for devices with high clock frequencies and quick changes into and out of sleep modes. In such applications, simply increasing the amount of ceramic output capacitor (sag and soar are directly proportional to capacitance) or adding extra bulk capacitance can easily eliminate any excessive voltage transients.



In any application with large quick transients, always calculate soar to make sure that over-voltage protection will not be triggered. Under-voltage is not likely since the threshold is very low (50%), that function has a long delay (10 $\mu$ s), and the IC will quickly return the output to regulation. Over-voltage protection has a minimum threshold of 125% and short delay of 10 $\mu$ s and can actually be triggered by incorrect component choices, particularly for the RT6213A which does not sink current.

#### **Output Capacitors Stability Criteria**

The e RT6213A/B's ACOT<sup>TM</sup> control architecture uses an internal virtual inductor current ramp and other compensation that ensures stability with any reasonable output capacitor. The internal ramp allows the IC to operate with very low ESR capacitors and the IC is stable with very small capacitances. Therefore, output capacitor selection is nearly always a matter of meeting output voltage ripple and transient response requirements, as discussed in the previous sections. For the sake of the unusual application where ripple voltage is unimportant and there are few transients (perhaps battery charging or LED lighting) the stability criteria are discussed below.

The equations giving the minimum required capacitance for stable operation include a term that depends on the output capacitor's ESR. The higher the ESR, the lower the capacitance can be and still ensure stability. The equations can be greatly simplified if the ESR term is removed by setting ESR to zero. The resulting equation gives the worst-case minimum required capacitance and it is usually sufficiently small that there is usually no need for the more exact equation :

$$C_{OUT} > \frac{3 \times 5.23 \times 10^{-11}}{V_{IN} \times L}$$

The worst-case high capacitance requirement is for low VIN and small inductance, so a 12V to 1.2V converter is used for an example. Using the inductance equation in a previous section to determine the required inductance :

$$L = \frac{1.2 \times (12 - 1.2)}{12 \times 500 \text{kHz} \times 0.5\text{A}} = 4.3 \mu\text{H}$$

Therefore, the required minimum capacitance for the 12V to 1.2V converter is :

$$C_{OUT} > \frac{3 \times 5.23 \times 10^{-11}}{12 V \times 4.3 \mu H}$$
$$C_{OUT} > 3.04 \mu F$$

Any ESR in the output capacitor lowers the required minimum output capacitance, sometimes considerably. For the rare application where that is needed and useful, the equation including ESR is given here :

$$C_{OUT} \geq \frac{V_{OUT}}{2 \times f_{SW} \times V_{IN} \times (R_{ESR} + 13647 \times L \times V_{OUT})}$$


As can be seen, setting R<sub>ESR</sub> to zero and simplifying the equation yields the previous simpler equation. To allow for the capacitor's temperature and bias voltage coefficients, use at least double the calculated capacitance and use a good quality dielectric such as X5R or X7R with an adequate voltage rating since ceramic capacitors exhibit considerable capacitance reduction as their bias voltage increases.


#### Feed-forward Capacitor (C<sub>ff</sub>)

The RT6213A/B are optimized for ceramic output capacitors and for low duty cycle applications. However for high-output voltages, with high feedback attenuation, the circuit's response becomes over-damped and transient response can be slowed. In high-output voltage circuits ( $V_{OUT} > 3.3V$ ) transient response is improved by adding a small "feed-forward" capacitor (C<sub>ff</sub>) across the upper FB divider resistor (Figure 1), to increase the circuit's Q and reduce damping to speed up the transient response without affecting the steady-state stability of the circuit. Choose a suitable capacitor value that following below step.

Get the BW the quickest method to do transient response form no load to full load. Confirm the damping frequency. The damping frequency is BW.

Copyright © 2015 Richtek Technology Corporation. All rights reserved.

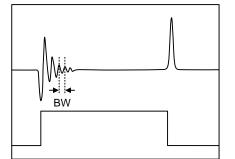

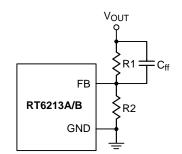



► Cff can be calculated base on below equation :

$$C_{ff} = \frac{1}{2 \times 3.1412 \times R1 \times BW \times 0.8}$$

#### **Enable Operation (EN)**

For automatic start-up the low-voltage EN pin can be connected to VIN through a  $100k\Omega$  resistor. Its large hysteresis band makes EN useful for simple delay and timing circuits. EN can be externally pulled to VIN by adding a resistor-capacitor delay (R<sub>EN</sub> and C<sub>EN</sub> in Figure 2). Calculate the delay time using EN's internal threshold where switching operation begins (1.5V, typical).

An external MOSFET can be added to implement digital control of EN when no system voltage above 2V is available (Figure 3). In this case, a  $100k\Omega$  pull-up resistor, R<sub>EN</sub>, is connected between VIN and the EN pin. MOSFET Q1 will be under logic control to pull down the EN pin. To prevent enabling circuit when VIN is smaller than the VOUT target value or some other desired voltage level, a resistive voltage divider can be placed between the input voltage and ground and connected to EN to create an additional input under voltage lockout threshold (Figure 4).






Figure 2. External Timing Control




Figure 3. Digital Enable Control Circuit




Figure 4. Resistor Divider for Lockout Threshold Setting

#### Output Voltage Setting

Set the desired output voltage using a resistive divider from the output to ground with the midpoint connected to FB. The output voltage is set according to the following equation :

 $V_{OUT} = 0.8V \times (1 + R1 / R2)$ 

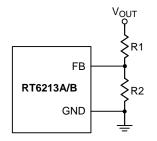


Figure 5. Output Voltage Setting

Place the FB resistors within 5mm of the FB pin. Choose R2 between  $10k\Omega$  and  $100k\Omega$  to minimize power consumption without excessive noise pick-up and calculate R1 as follows :

$$R1 \!=\! \frac{R2 \!\times\! (V_{OUT} - V_{REF})}{V_{REF}}$$

For output voltage accuracy, use divider resistors with 1% or better tolerance.

#### External BOOT Bootstrap Diode

When the input voltage is lower than 5.5V it is recommended to add an external bootstrap diode between VIN (or VINR) and the BOOT pin to improve enhancement of the internal MOSFET switch and improve efficiency. The bootstrap diode can be a low cost one such as 1N4148 or BAT54.

#### **External BOOT Capacitor Series Resistance**

The internal power MOSFET switch gate driver is optimized to turn the switch on fast enough for low power loss and good efficiency, but also slow enough to reduce EMI. Switch turn-on is when most EMI occurs since V<sub>LX</sub> rises rapidly. During switch turn-off, LX is discharged relatively slowly by the inductor current during the dead time between high-side and low-side switch on-times. In some cases it is desirable to reduce EMI further, at the expense of some additional power dissipation. The switch turn-on can be slowed by placing a small (<47 $\Omega$ ) resistance between BOOT and the external bootstrap capacitor. This will slow the high-side switch turn-on and VLX's rise. To remove the resistor from the capacitor charging path (avoiding poor enhancement due to undercharging the BOOT capacitor), use the external diode shown in Figure 6 to charge the BOOT capacitor and place the resistance between BOOT and the capacitor/diode connection.

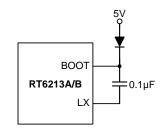


Figure 6. External Bootstrap Diode

#### Thermal Considerations

For continuous operation, do not exceed absolute maximum junction temperature. The maximum power dissipation depends on the thermal resistance of the IC package, PCB layout, rate of surrounding airflow, and difference between junction and ambient temperature. The maximum power dissipation can be calculated by the following formula :

 $P_{D(MAX)} = (T_{J(MAX)} - T_A) / \theta_{JA}$ 

where  $T_{J(MAX)}$  is the maximum junction temperature,  $T_A$  is the ambient temperature, and  $\theta_{JA}$  is the junction to ambient thermal resistance.

For recommended operating condition specifications, the maximum junction temperature is 125°C. The junction to ambient thermal resistance,  $\theta_{JA}$ , is layout dependent. For TSOT-23-6 (FC) package, the thermal resistance,  $\theta_{JA}$ , is 60°C/W on a standard four-layer thermal test board. The maximum power dissipation at  $T_A = 25^{\circ}$ C can be calculated by the following formula :

 $P_{D(MAX)} = (125^{\circ}C - 25^{\circ}C) / (60^{\circ}C/W) = 1.667W$  for TSOT-23-6 (FC) package

The maximum power dissipation depends on the operating ambient temperature for fixed  $T_{J(MAX)}$  and thermal resistance,  $\theta_{JA}$ . The derating curve in Figure 7 allows the designer to see the effect of rising ambient temperature on the maximum power dissipation.

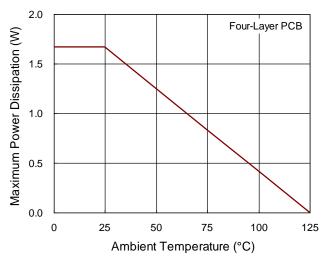


Figure 7. Derating Curve of Maximum Power Dissipation


## RICHTEK

#### Layout Considerations

Follow the PCB layout guidelines for optimal performance of the device.

- Keep the traces of the main current paths as short and wide as possible.
- Put the input capacitor as close as possible to VIN and VIN pins.
- ► LX node is with high frequency voltage swing and should be kept at small area. Keep analog components away from the LX node to prevent stray capacitive noise pickup.
- Connect feedback network behind the output capacitors. Keep the loop area small. Place the feedback components near the device.

- Connect all analog grounds to common node and then connect the common node to the power ground behind the output capacitors.
- ▶ For better thermal performance, to design a wide and thick plane for GND pin or to add a lot of vias to GND plane.
- An example of PCB layout guide is shown in Figure 8 for reference.

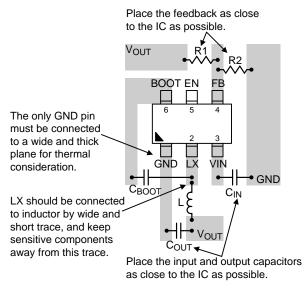




Copyright © 2015 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation. www.richtek.com



### **Outline Dimension**

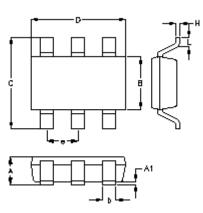

Symbol	Dimensions	n Millimeters	Dimensions In Inches		
Symbol	Min.	Max.	Min.	Max.	
А	0.700	1.000	0.028	0.039	
A1	0.000	0.100	0.000	0.004	
В	1.397	1.803	0.055	0.071	
b	0.300	0.559	0.012	0.022	
С	2.591	3.000	0.102	0.118	
D	2.692	3.099	0.106	0.122	
е	0.950		0.0	)37	
Н	0.080	0.254	0.003	0.010	
L	0.300	0.610	0.012	0.024	

TSOT-23-6 (FC) Surface Mount Package

### **Richtek Technology Corporation**

14F, No. 8, Tai Yuen 1<sup>st</sup> Street, Chupei City Hsinchu, Taiwan, R.O.C. Tel: (8863)5526789

Richtek products are sold by description only. Richtek reserves the right to change the circuitry and/or specifications without notice at any time. Customers should obtain the latest relevant information and data sheets before placing orders and should verify that such information is current and complete. Richtek cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Richtek product. Information furnished by Richtek is believed to be accurate and reliable. However, no responsibility is assumed by Richtek or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Richtek or its subsidiaries.

Copyright © 2015 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.